

Tool Release (TR) Connectors

The BFM® TR (Tool Release) Connector has been developed for applications where the connector is mounted very close to equipment that is rotating or spinning very fast, providing additional safety for production and maintenance staff. The Snap Ring of the BFM® TR connector is manufactured to have a firmer fit than a standard connector which also makes it ideal for negative pressure (vacuum) applications.




The BFM® TR (tool release) O40E and O40AS fittings have an embossed identifier stamp to make them easy to differentiate from our standard fittings.



The BFM® 'TR Release Tool'.

There are some applications where it is advisable to have a connector fitted so that a tool must be used to remove the connector to keep hands away from potentially dangerous machinery.

Once a BFM® TR connector is fitted, it is virtually impossible to remove it manually. It is, however, straightforward to remove using a TR Release Tool, which is simply inserted into a 6mm hole in the side of both the upper and lower spigots.

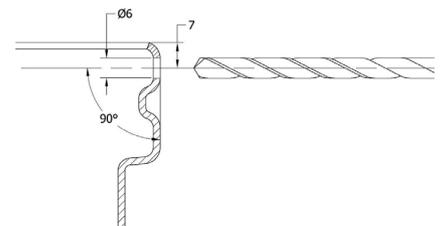

A 6mm hole is drilled in a standard spigot in the position shown above.



Another very popular way of ensuring safety while using the BFM® fitting near rotating machines is to use a proximity sensor switch.

For more information, please see the 'BFM® Guidelines: Proximity Sensors'.

It is important to note that the BFM® TR connector fits very firmly in place and that caution must be used when inserting and removing the connectors.
Please refer to the installation instructions on the following page.

CAUTION:
Although the firmer TR band is a significant deterrent to manual removal, if an individual is determined enough, it may still be possible.

Tool Release (TR) Connectors


Installation:



01. Ensure the BFM® spigot is clean and dry.



02. Seat the back of the connector into the BFM® spigot and release. The cuff will snap into the spigot.

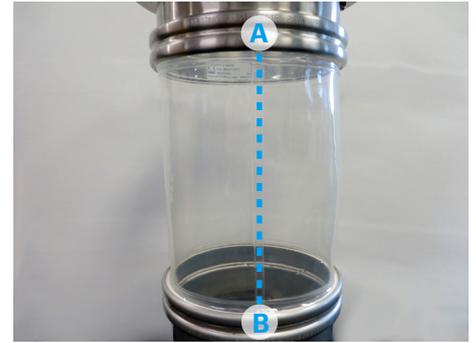

03. Snap into the second spigot, ensuring that the welded seam of the connector is straight and that points A and B are directly in line.

IMPORTANT: POSITION CUFF WELDS AWAY FROM THE TR TOOL INSERTION HOLE

All 040E and 040AS TR connectors are made so that the weld in the cuff is positioned away from the embossed 'Tool Release' label on the front of the connector.

To reduce the chance of the TR tool being inserted directly on the weld in the snap-band (which is naturally the weakest point), always ensure you position the front 'Tool Release' label directly above the TR insertion hole on the spigot.

For TR connectors made of other materials, ensure the batch label (on the inside of the connector cuff, directly over the welding point) is positioned at least 25mm away from the TR hole.



Removal:



01. Insert the removal tool in the opening of the hole and push towards the centre of the fitting.



02. Hold the seal of the connector and remove from the spigot.

CAUTION!

It is important when installing or removing the TR fitting to keep your fingers clear of the seal as it snaps into place with force.

Your spigots are now ready for a new connector.

BFM® Global makes no warranty of any kind, expressed or implied, except that goods sold shall be of merchantable quality, free of manufacturing defect, and the buyer assumes all risk and liability resulting from the use of the goods, whether used singly or in combination with other products.